

Guardian

by **Gasmate**®

PORTABLE INSECT KILLER & LIGHT

Model No. GIK100

Portable insect killer that will help to reduce pests in your outdoor entertaining area

- Contemporary and dual functional design
- 50,000 hour long life LED
- Dual function: UVA LED light for attracting and killing insects and White LED for convenient lighting
- Internal pillars reflect the UVA light for greater insect attraction
- ON/OFF button for easy operation
- High voltage inner grids for 100% killing rate
- Includes a brush for easy cleaning
- Ideal for BBQ, patio, picnics, fishing, camping and 4X4
- Uses 3 x AA batteries (not included)
- Product Size: 12 x 12 x 24cm (WxDxH)



Gasmate® is a registered trademark of: Sitro Group Australia Pty Ltd www.gasmate.com.au
Aber Living Ltd - N.Z www.gasmate.co.nz

Important: Retain these instructions for future use.

03797 09/18

REQUIRED FOR USE:

- 3 x "AA" batteries only use Alkaline Batteries, do not use rechargeable batteries

HOW TO USE:

- Tip appliance upside down and unclip battery cover.
- Insert 3 x "AA" alkaline batteries follow markings for battery direction.
- Clip battery cover into place and position appliance upright.
- Select location.
- Press top button to turn on and off and to select function (UV or light);
- 1st press = UV attraction light
- 2nd press = White light
- 3rd press = Appliance is OFF
- To clean, turn appliance off and remove batteries.
- Gently blow out insects or debris with your breath.
- For stubborn insects or debris use brush on bottom panel to gently brush off and again gently blow out with your breath. Replace brush if used.
- Replace batteries and cover.

GENERAL SAFETY WARNINGS:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children and pets must not play with the appliance.
- Cleaning and changing batteries must not be performed by children.
- Turn off the appliance and remove the batteries before cleaning, or when the appliance is not in use.
- Keep the appliance away from heat sources, hot objects and naked flames.
- If the appliance has been damaged,
- This appliance must not be used in areas where there may be any dust or flammable fumes.
- Never try to repair the appliance yourself have the appliance inspected by an authorised repairer.
- Never insert fingers or objects into the appliance, especially when it is switched on. Contact with the high-voltage grids in the appliance may cause a serious electrical shock.
- Check that the appliance has no visible damage and that no parts are missing before use.
- Do not submerge the appliance in water, and do not let water enter the appliance.
- Only clean the appliance when it is off and the batteries have been removed. Clean the outside of the appliance by wiping it with a damp lint free cloth.

Gasmate® is a registered trademark of:
Sitro Group Australia Pty Ltd www.gasmate.com.au
Aber Living Ltd, N.Z www.gasmate.co.nz

Gasmate®