



Ceramic Table Top Flare

Model No. TK988

FOR YOUR SAFETY

1. The flare is not designed for any kind of cooking purpose.
2. Do not store or use gasoline or other flammable vapour and liquids in the vicinity of this or any other appliance.
2. The flare must be placed on level ground with adequate footing and be readily accessible.
 - a. The appliance area must be kept clear and free of combustible materials, gasoline and other flammable vapours and liquids.
 - b. Gas orifices and the burner must be kept clear of dirt and cobwebs. Flow of combustion and ventilation air through the perforated portions of the flare must not be obstructed.
 - c. Any cleaning agent used on the flare should be of a non-combustible and non-corrosive nature.
3. Proper clearance from combustible materials must be maintained at all times.

INSTALLATION



IMPORTANT SAFETY RULES

1. Children and adults should be alert to the high surface temperature of areas both on and around the flare when it is being operated. It is important to also be aware that it will take some time for the flare to cool down after use.
 2. Children should be carefully supervised when they are in the area of the flare.
 3. **DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.**
1. Remove appliance from carton and remove any transit protection material.
- The minimum clearance from combustibles is as follows:
- | | |
|-------|--------|
| Sides | 500 mm |
| Top | 600 mm |
- Combustible materials are considered to be wood, compressed paper, plant fibres, plastic, Plexiglas or other materials capable of being ignited and burned. Such materials shall be considered combustible even though flame proofed, fire-retardant treated or plastered.
- Additional clearance may be required for glass, painted surfaces and other materials which may be damaged by radiant or convection heat.



WARNING - FOR OUTDOOR USE ONLY

ONLY USE IN WELL-VENTILATED AREAS. CARBON MONOXIDE HAZARD—USING THIS APPLIANCE IN AN ENCLOSED SPACE MAY CAUSE DEATH. DO NOT USE IN CARAVANS, TENTS, MARINE CRAFT, CARS, MOBILE HOMES OR SIMILAR LOCATIONS. Use on non-flammable surfaces only.

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Read the instructions thoroughly before installing or servicing this flare.

Important: Read these instructions before use carefully. Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.

Important: The installer or seller must leave these instructions with the consumer.

OPERATION

Fitting of the cartridge (available separately)

This Flare works best with GASMATE butane/propane mix cartridges. Alternatively, a replaceable citronella scented cartridge is available.

Only use canisters certified to (EN417) with 80% butane/20% propane, or 75% butane/25% propane fuel mix. IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CARTRIDGES with a different fuel mix and/or connection types to this appliance.

Check that seals between the appliance and the gas canister are in place and the sealing gasket is in good condition before connecting the gas canister. Do not use this appliance if it has damaged or worn seals. Do not use this appliance if it is leaking, damaged or does not operate properly.

Remove the cap protecting the cartridge valve and screw onto the Flare.

IGNITION & OPERATION

Open the gas cock slightly in an anti-clockwise direction ("+") and hold a lighted match near the burner.

To achieve the desired setting, turn the knob anti-clockwise towards ("+") in order to increase the flame.

Turn the knob clockwise towards ("-") in order to decrease the flame.

Warning: Do not move the appliance during use.

If the flame becomes unstable or noisy or if gas can be smelt, seen or heard escaping from the valve, turn off appliance and disconnect canister. If there is a leak from your appliance (smell of gas) and you cannot stop the gas flow, remove the appliance to a well-ventilated location away from any ignition source. Check for leaks using soapy water. Do not try to detect leaks using a flame. Any work or repair of the Flare must be performed by qualified service personnel.

SHUTDOWN

Turn the knob clockwise towards ("-") and hand tighten to ensure the gas is off.

CARTRIDGE REPLACEMENT

Gas cartridges shall be changed in a well-ventilated location. Preferably outside away from people and any sources of ignition, such as naked flames, pilot flames, electric heaters/equipment.

Make sure that the cartridge is empty by shaking it lightly. If the cartridge is still useable, you will hear a liquid sound inside.

Before replacing the cartridge, make sure that the gas cock is closed and that the burner is off and cold.

Dispose of the empty cartridge in a safe manner.

MAINTENANCE

Clean the body of your Flare by using a cotton cloth soaked in soapy hot water. Never use abrasive or flammable cleaning products. To clean the burner, use a soft brush.

Servicing of this appliance is generally not required. Replacement is advised if any parts are identified as worn or the Flare is not operating as intended.


Injector Size: 0.218mm.

STORAGE OF THE FLARE

When the Flare is not used it must be stored in a vertical position and in a suitable area to protect it from any risk of deterioration. Keep it in a cool, well ventilated area out of sunlight and out of reach of children.

Remove the butane cartridge when not in use.

Any indoor storage shall comply with AS/NZS1596.

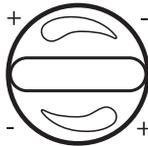

DO NOT MODIFY THIS APPLIANCE

Gas consumption: 4.1 MJ/h

WARRANTY INFORMATION

Sitro Group Australia Pty. Ltd and Aber warrants the Gasmate Ceramic Outdoor Flare to be free from defects in material and workmanship under normal conditions of use in a commercial application for a period of 90 days from date of purchase and in a residential application for a period of 1 year. Any work or repair of the Flare must be performed by qualified service personnel. In most cases your retailer will handle the warranty procedure for you in your area.